

PENIS SLEEVE REGULAR FIT EXTENSION



User manual

CONTROL

- 1) Press the on/off button on the side of the cartridge.
- 2) To turn off, hold the on/off button on the side of the cartridge.

MAINTENANCE

Rinse the sleeve with lukewarm water and soapy detergent after each use.

CAUTION! Remove the battery cartridge before washing the vibrating ring!

You can also use [an erotic aid cleaner](#), which also helps to remove microscopic dirt.

Just spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrating cartridge is not waterproof or water resistant.

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and the lubricant will become sticky.

DRIVE AND CHARGING

The vibrating cartridge is powered by three LR44 batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find a vibrating extension sleeve with a vibrating cartridge.