

VIBRATOR SEVEN CREATIONS

JELLY SLIM JIM



User manual

CONTROL

- 1) The bottom of the vibrator serves as a cover for the batteries.
- 2) Unscrew it and insert the AA battery into the vibrating cartridge according to the marked poles.
- 3) Screw them back in.
- 4) There is a wheel on the cover that is also used for on/off and infinitely variable vibration control.

MAINTENANCE

After each use, rinse the device with lukewarm water and soapy detergent.

You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrator is **not water resistant or waterproof!**

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The vibrator is powered by an AA battery.

We recommend using alkaline or rechargeable batteries for longer battery life.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find a vibrator.