

MASTURBATOR NMC KABUKI NIGHTS TIGHT DELIGHT PINCH



User manual

CONTROL

- 1) At the bottom of the masturbator there is a cover for the batteries.
- 2) Insert 2 AAA batteries into it according to the marked poles.
- 3) Turn the dial on the bottom side of the masturbator to turn on the vibration.
- 4) You can also use the same dial to adjust them.

MAINTENANCE

First, remove the sleeve from the masturbator and clean it with lukewarm water.

You can also use an **erotic cleaner**, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The masturbator **is not waterproof or water resistant!**

LUBRICATION

Use only **water-based lubricants**. Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The masturbator is powered by two AAA batteries.

For greater endurance, we recommend using alkaline or rechargeable batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Masturbator.