

# PENIS RING DOC JOHNSON OPTIMALE VIBRATING C-RING



## User manual

### OPERATION

- 1) Press the on/off button on the side of the cartridge.
- 2) To turn off, hold the on/off button on the side of the cartridge.

### MAINTENANCE

Rinse the ring with lukewarm water and soapy detergent after each use.

**CAUTION!** Remove the battery cartridge before washing the vibrating ring!

You can also use [an erotic aid cleaner](#), which also helps to remove microscopic dirt.

Just spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.<sup>1</sup>

### WATERPROOF

The vibrator is **water resistant**, so maintenance is very easy.

The vibrator can be splashed with water, but you **MUST NOT immerse it in water!**

Waterproof means that you could completely submerge the product in water and enjoy water play.

Due only to the water resistance of the product, this is not possible in this case.

### LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and the lubricant will become sticky.

### DRIVE AND CHARGING

The vibrating ring is powered by three LR41 batteries.

### STORAGE

Store separately from other erotic aids in a dry and dark place.

### PACKAGING CONTENTS

In the package you will find the vibrating ring and 3 spare batteries type LR41.