

REAL DEAL ANAL VIBRATOR



User manual

CONTROL

- 1) The bottom of the vibrator serves as a cover for the batteries.
- 2) To turn on the vibrator, remove the battery cover, insert AA battery (not included) and screw the cover back on.
- 3) The vibrator is turned on and off by turning the wheel on the battery cover, which also serves as a vibration controller.

MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent. You can also use an **erotic cleaner**, which also helps to remove microscopic dirt. Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrator is **not waterproof or water resistant!**

LUBRICATION

Due to the material of the vibrator, you can use **lubricants of any base**.

DRIVE AND CHARGING

The vibrator is powered by AA battery. For greater endurance, we recommend using alkaline or rechargeable batteries.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Vibrator.