

WILD BERRIES SET (VIBRATOR)



User manual

VIBRATOR CONTROL

- 1) The bottom of the vibrator serves as a cover for the batteries.
- 2) Unscrew the cover and insert 2 C batteries and screw the cover back on.
- 3) Start the vibrator by turning the wheel at the bottom of the cover.
- 4) Turn the same wheel to control the intensity of the vibration.

MAINTENANCE

Rinse the vibrator with lukewarm water and soapy detergent after each use.

You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrator is **not waterproof or water resistant!**

LUBRICATION

For the vibrator use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The vibrator is powered by two C batteries.

We recommend the use of alkaline or rechargeable batteries for greater endurance.

STORAGE

Store separately from other erotic aids in a dry and dark place.