

VIBRATOR IN THE ARMCHAIR SILVIA SAINT LOVE CHAIR



User manual

CONTROL

- 1) Insert 2 AA batteries into the remote control.
- 2) To switch the vibration on/off, the wheel on the side of the controller is used for smooth vibration control.

MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent.

You can also use an **erotic cleaner**, which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrator is not waterproof or water resistant!

LUBRICATION

Due to the material of the vibrator, you can use lubricants of any base.

DRIVE AND CHARGING

The vibrator (remote control) is powered by two AA batteries. We recommend using alkaline or rechargeable batteries for longer battery life.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

Inflatable pillow with vibrator with remote control.