

STIMULÁTOR PDX ELITE VIBRATING SILICONE



User manual

OPERATION

- 1) There is a vibrating cartridge on the bottom of the stimulator, pull it out, unscrew the battery cover and remove the mica, which is located between the cover and the battery.
- 2) Press the vibration on/off button on the side of the cartridge.

MAINTENANCE

After each use, rinse the stimulator with lukewarm water and soapy detergent. You can also use [an erotic aid cleaner](#), which also helps to remove microscopic dirt. Just spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrating cartridge **is not waterproof or water resistant!**

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and the lubricant will become sticky.

DRIVE AND CHARGING

The vibrating cartridge is powered by an AAA battery. We recommend the use of alkaline or rechargeable batteries for greater durability.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find a stimulator with a vibrating cartridge and 3 silicone rings.