

# Instruction Manual

## Product Information

Material	Silicone + ABS
Battery Type	Lithium Battery
Vibration	10 Modes
Charging Time	About 2.5 Hours
Use Time	About 1.3 hours ( Fully Charged )
Product Size	211.94 * 31.12 * 33.6 mm (H*W*L)
Waterproof Rating	IPX-7
Collection Method	In a Cool , Dry , Non-dolluting Place
Package Include	1 * Vibrator , Instruction Manual , Charging Cable

**Warning:** For charging products , it must be discharged once every 6 months. ( Discharging process : full charge first--power consumption is complete--again full charge.)


## Instructions

Ⓜ "on": Long press for 1.5s to work . The double motor has a short lock and then indicator light is on.

Ⓜ tongue vibration "on": short press , the indicator light is in, 10 total of vibration modes . long press for is to turn off the tongue vibration mode and the indicator light is off.

Ⓜ Head vibration "on": short press , the indicator light is in, 10 total of vibration modes . long press for is to turn off the tongue vibration mode and the indicator light is off.

Ⓜ Maximum button: Click the button, vibration, thrusting and licking are at their maximum.

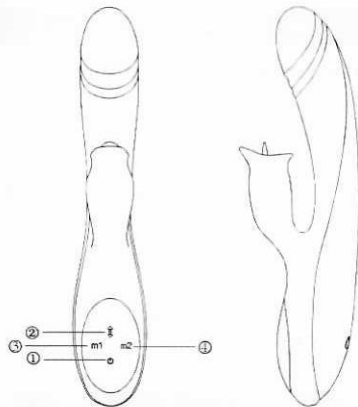

- 1 Power Button    2 Maximum button  
3 Head vibration mode    4 Tongue vibration mode

## How to charge

- 1 . Please ensure the Vibrator is turn off before charge.

- 2 . Connected power cord to a computer or a connector with a USB socket

- 3 . Connect the Magnetic charge port of the USB power to the charging port on the bottom of the product.

- 4 . The LED light of power button flashes slowly when the product is charged.

- 5 . The charging process generally takes 2.5 hours , the LED light will not flash and be turned on when the charge is complete.

## Using Attention

- 1 . Before using for the first time , the product must be fully charged.

- 2 . Please use an international USB charging plug with a voltage of 5-5.5V and a current of 1-1.2A.

- 3 . Do not operate and do not touch the water while charging.

- 4 . If you found the power cord is lost when received the product ,please contact the seller.

- 5 . Before and after using , please clean the product with warm water and mild disinfectant , and then dry it.

- 6 . After the product has been idle for some time , please charge it before using the product.

- 7 . If you feel uncomfortable during use , please stop using it immediately.

## Instructions for maintenance

- 1 . Clean the Vibrator before and after use with warm water and soap.

- 2 . Separate the Vibrator from other products made of different material for chemical reactions.

- 3 . If the Vibrator is overheated , turn it off immediately and let it cool off before renewed use.

- 4 . Remember not excessively bending or stretching . Never press the Vibrator vigorously.

- 5 . The Vibrator should be kept out of the reach of children.

## Common problem

- 1.Can't open or close ?

A : Please follow the instructions for use;  
Please charge the product;  
Please check the product power button light status.

- 2 . Why is the product vibration frequency weakened ?  
A : The battery is low . Please charge it.

- 3 . What need to do if the product can not charge ?  
A: Please check if the power is on;  
Please check if the power cord is damaged;  
Please check the power cord and product are connected correctly.  
If you cannot solve the problem , please contact the seller service.