

KALHOTKY FANTASY FOR HER CROTCHLESS PANTY THRILL THRILL-HER (VIBRATOR)



User manual

CONTROL

- 1) Fully charge the vibrator and remote control before first use.
- 2) Turn the vibrator on/off by pressing the "power" button for approx. 3 seconds.
- 3) If you want to use the vibrator without the remote control, short presses of the "power" button change the vibration rhythms.
- 4) For use with the controller, a longer press puts it in standby mode.
- 5) Short presses of the "power" button on the controller then change the vibration and pulsation rhythms.
- 6) To turn the vibrator off with the remote control, press the "power" button for about 3 seconds.

MAINTENANCE

After each use, rinse the vibrator with lukewarm water and soapy detergent.

You can also use an [erotic cleaner](#), which also helps to remove microscopic dirt.

Simply spray the product, leave it on for about 1 minute and then dry with a towel or cloth that does not leak fibers.

WATERPROOF

The vibrator is **not water resistant or waterproof!**

LUBRICATION

Use only [water-based lubricants](#). Other lubricating gels could damage the surface of the aid and it could become sticky.

DRIVE AND CHARGING

The vibrator is powered by an integrated battery, which is approximately half charged from the factory, but we recommend that you fully charge it before first use.

Charge the battery using the included USB cable, which can be plugged into a phone adapter, PC or powerbank. When charging, the LED flashes and when fully charged, the LED control lights up permanently.

STORAGE

Store separately from other erotic aids in a dry and dark place.

PACKAGING CONTENTS

In the package you will find a vibrator, remote control, USB charging cable and panties.