

Before use

Open the vibrating egg and remove the small piece of protective plastic placed between the batteries and the connection point. Make sure the batteries are placed correctly. Close the egg and make sure it is properly sealed to prevent moisture from entering. Open the battery compartment of the remote control and remove the protective plastic placed under the battery. Close the battery compartment.

Turning on and off

Press the power button on the remote control. The egg will start vibrating. When this is not the case, the batteries are empty or not placed correctly. Check the batteries and replace them if necessary. Press the power button on the remote control to turn off the vibrations.

Operating

The various vibration settings and speeds can be controlled with the buttons on the remote control. Press the plus or minus button to increase or decrease the vibration speed. Press the right button to go to the next vibration pattern. Press the left button to go back to the previous vibration pattern. There are 3 vibration speeds and 7 vibration patterns in total.

Lubricant

The vibrator is made of ABS plastic. Therefore the vibrating egg can be used in combination with all types of lubricant.

Cleaning

Rinse the vibrating egg with lukewarm water. Apply toy cleaner to the egg and rinse it off with lukewarm water again. Repeat this step if necessary. Lay the egg down to dry or dab it dry with a clean cloth or towel.

Storage

Safely store the vibrating egg at a dry and dark place. Use a toy bag to protect the toy from dust and scratches.

This product is sold as a novelty product only. All rights reserved. To avoid injury or aggravation of pre-existing conditions this product should not be used on bruised, swollen or inflamed areas. Only use the product as instructed. No medical claims are warranted or implied by the use of this product, its use is at your own risk. Do not attempt to warm this product in a microwave or conventional oven. Wash before and after use, with a mild soap and warm water. Allow to dry completely before storing separately from other toys in a cool, dry place. Store at room temperature.