

Before use

Charge the vibrator completely before first use with the included USB cable. Plug the pin at the end of the charging cable into the charging point at the bottom the vibrator. Connect the cable to a USB port. When the battery is charging, the LED light of the power button blinks. When the light stops blinking and burns constantly, the battery is completely charged.

Turning on and off

Keep the power button pressed down for 3 seconds to turn on the toy. The vibrator will then start vibrating. When this is not the case, the battery is empty. Charge the battery first and then try again. After use, keep the button pressed down for 3 seconds to turn off the toy.

Operating

Scroll through the 10 different vibration settings with the top button. Press the button once to go to the next setting.

Lubricant

The head of the vibrator is made of silicone. Therefore the vibrator can only be used in combination with water-based lubricant. Other lubricants can negatively affect the material, allowing bacteria to grow and making it impossible to hygienically clean the toy.

Cleaning

Apply toy cleaner to the head of the vibrator and thoroughly rub it clean. Repeat this step if necessary. Rinse the head of the vibrator with lukewarm water and lay it down to dry or dab it dry with a lint-free cloth or towel.

Storage

Safely store the vibrator at a dry and dark place. Use a toy bag to protect the toy from dust and scratches.

This product is sold as a novelty product only. All rights reserved. To avoid injury or aggravation of pre-existing conditions this product should not be used on bruised, swollen or inflamed areas. Only use the product as instructed. No medical claims are warranted or implied by the use of this product, its use is at your own risk. Do not attempt to warm this product in a microwave or conventional oven. Wash before and after use, with a mild soap and warm water. Allow to dry completely before storing separately from other toys in a cool, dry place. Store at room temperature.